



# Shiny, cleaner floors with the power of water

### Microfiber pads for optimal wetness control

Microfiber pads to effectively remove dirt and stains. Compatible with all Philips cordless stick vacuum cleaners with vacuum & mop system. Replace every 6 months for optimal performance.

#### **Philips Original accessories**

- · 2 gentle microfiber pads for delicate floors
- · 2 regular microfiber pads
- · Replace every 6 months
- · Washable and reusable pads

## Highlights

#### 2 gentle microfiber pads



The soft microfiber material gently loosens, lifts, and absorbs dust and dirt. Partifularly designed to clean delicate surfaces, such as wooden surfaces. Removing dirt and stains effectively and thoroughly

### 2 regular microfiber pads



The microfiber material loosens, lifts, and absorbs dust and dirt. Removing dirt and stains effectively and throroughly.

#### **Replace every 6 months**



Replace every 6 months to maintain an optimal cleaning performance of your appliance.

#### Washable and reusable pads

The microfiber pads are machine-washable and easy to attach and remove



### **General specifications**

Suitable for: FC6404, FC6405, FC6407-FC6409, FC6728(/01), FC6729, FC6901-FC6904, FC6908, XC8147, XC8149

Specifications

© 2020 Koninklijke Philips N.V. All Rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

Issue date 2020-07-05 Version: 1.1.1

EAN: 08 71010 39243 26

www.philips.com

